



BRIGGS & STRATTON GEAR CHART: 6.07 Ratio

ENGINE GEARS

		53	54	56	58	60	62	65
	38	4.35	4.27	4.12	3.98	3.83	3.71	3.55
A	39	4.47	4.38	4.23	4.08	3.93	3.81	3.64
X	40	4.58	4.50	4.34	4.19	4.03	3.90	3.74
L	41	4.70	4.61	4.44	4.29	4.13	4.00	3.83
E	42	4.81	4.72	4.55	4.40	4.24	4.10	3.92
	43	4.92	4.83	4.66	4.50	4.34	4.20	4.02
	44	5.04	4.95	4.77	4.60	4.44	4.29	4.11
G	45	5.15	5.06	4.88	4.71	4.54	4.39	4.20
E	46	5.27	5.17	4.99	4.81	4.64	4.49	4.30
A	47	5.38	5.28	5.09	4.92	4.74	4.59	4.39
R	48	5.50	5.40	5.20	5.02	4.84	4.68	4.48
S	49	5.61	5.51	5.31	5.13	4.94	4.78	4.58
	50	5.73	5.62	5.42	5.23	5.04	4.88	4.67
	51	5.84	5.73	5.53	5.34	5.14	4.98	4.76
	52	5.96	5.85	5.64	5.44	5.24	5.07	4.86
	53	6.07	5.96	5.74	5.55	5.34	5.17	4.95
	54	6.18	6.07	5.85	5.65	5.45	5.27	5.04



HONDA GEAR CHART: 6.0 Ratio

ENGINE GEARS

		53	54	56	58	60	62	65
	38	4.30	4.22	4.07	3.93	3.80	3.68	3.51
A	39	4.42	4.33	4.18	4.03	3.90	3.77	3.60
X	40	4.53	4.44	4.29	4.14	4.00	3.87	3.69
L	41	4.64	4.56	4.39	4.24	4.10	3.97	3.78
E	42	4.75	4.67	4.50	4.34	4.20	4.06	3.88
	43	4.87	4.78	4.61	4.45	4.30	4.16	3.97
	44	4.98	4.89	4.71	4.55	4.40	4.26	4.06
G	45	5.09	5.00	4.82	4.66	4.50	4.35	4.15
E	46	5.21	5.11	4.93	4.76	4.60	4.45	4.25
A	47	5.32	5.22	5.04	4.86	4.70	4.55	4.34
R	48	5.43	5.33	5.14	4.97	4.80	4.65	4.43
S	49	5.55	5.44	5.25	5.07	4.90	4.74	4.52
	50	5.66	5.56	5.36	5.17	5.00	4.84	4.62
	51	5.77	5.67	5.46	5.28	5.10	4.94	4.71
	52	5.89	5.78	5.57	5.38	5.20	5.03	4.80
	53	6.00	5.89	5.68	5.48	5.30	5.13	4.89
	54	6.11	6.00	5.79	5.59	5.40	5.23	4.98